



# Lenovo G780 Keyboard Replacement

If you need to remove and replace the keyboard...

Written By: Robert Bishop



# INTRODUCTION

If you need to remove and replace the keyboard for the Lenovo G780, follow the steps in this guide.


## TOOLS:

[Phillips #0 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Spudger](#) (1)

## Step 1 — Battery

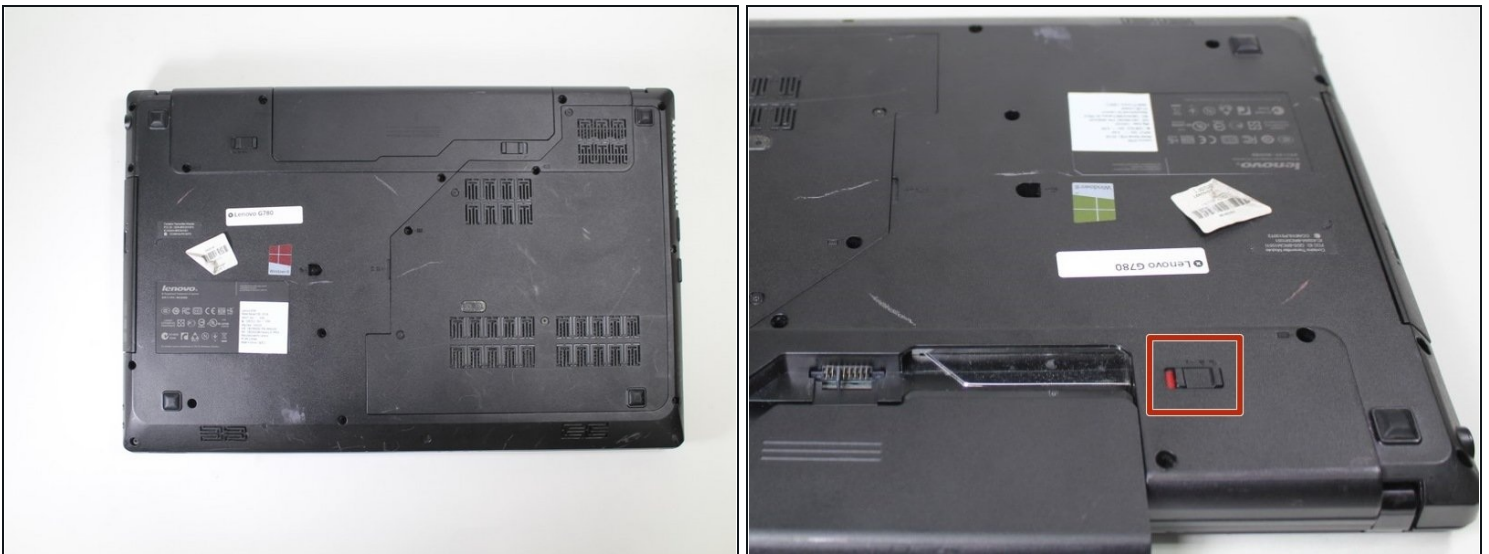


- Turn off the computer.
- Slide the battery-lock switch on the bottom of the laptop to the unlocked position.

## Step 2



- Hold the battery release switch in the unlocked position and remove the battery.


## Step 3 — Keyboard

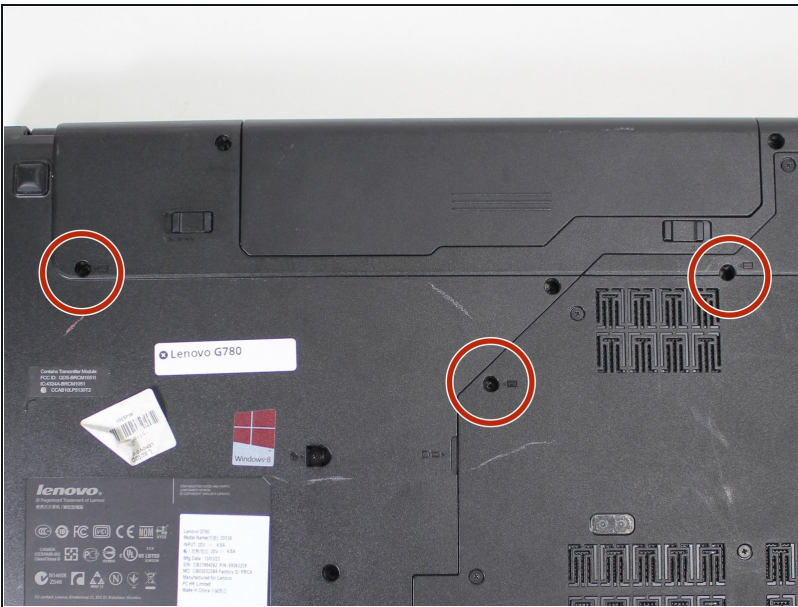

- Remove the three 9mm keyboard screws with a #0 Phillips screwdriver.




## Step 4

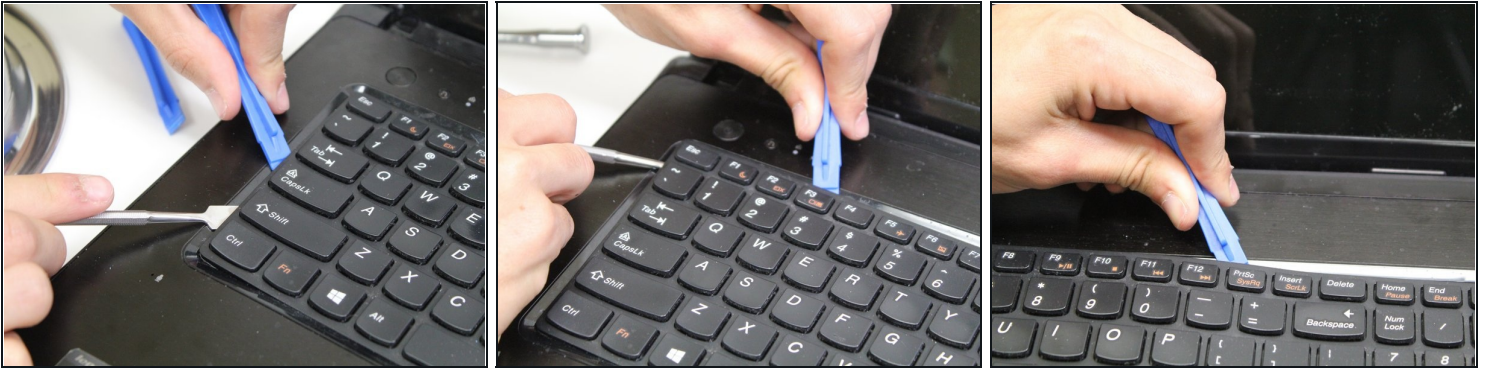

- With a plastic opening tool, start on the left of the keyboard and gently pry the keyboard off the laptop.
- Be careful removing the keyboard to prevent from tearing the delicate connector.

## Step 5

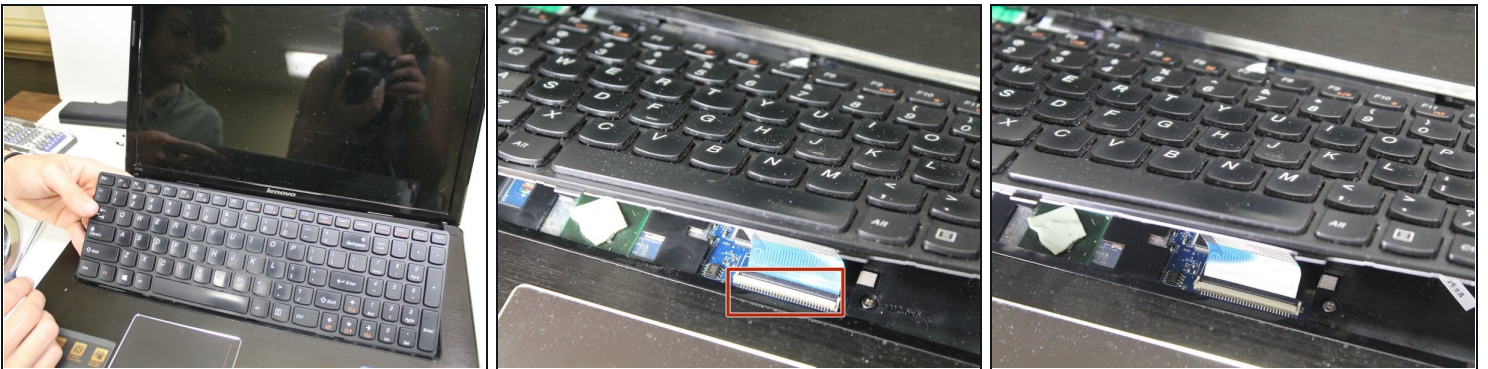

- Slightly lift the keyboard from the laptop.
- Push the grey lock upward to unlock the ZIF connector.
- Carefully lift the keyboard connector from its socket.

To reassemble your device, follow these instructions in reverse order.