


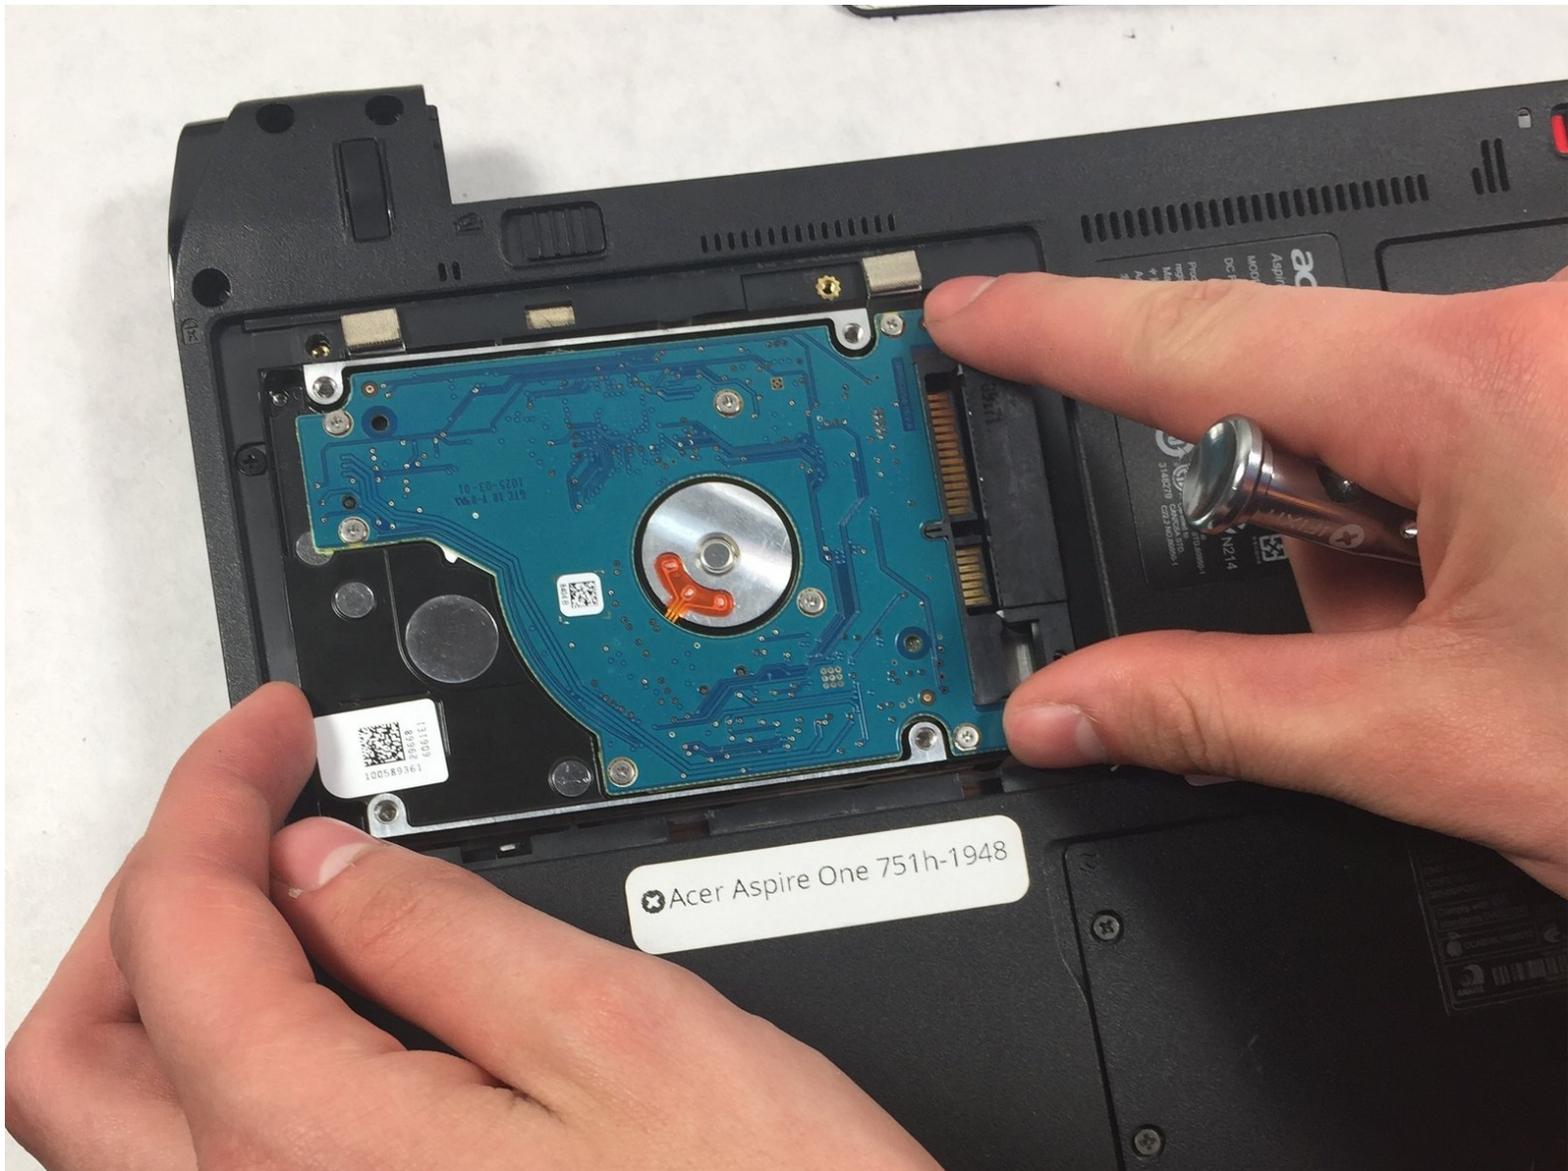

Acer Aspire One 751h-1948 Hard Drive Replacement

This guide will help you replace the hard drive the Acer Aspire One 751h-1948.

Written By: Francisco Monteiro Junior



INTRODUCTION

This guide will help you replace the hard drive the Acer Aspire One 751h-1948.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Close the laptop and flip it over to view the back of the laptop.

Step 2




- Unlock the right side of the battery by sliding the battery lock to the right. Then slide the left lock to the left and remove the battery.

Step 3 — Hard Drive





- Unscrew the Phillips 0# (M2 L2.5 mm) screw and remove the cover panel.
- ⓘ These screws will not come out all the way.

Step 4

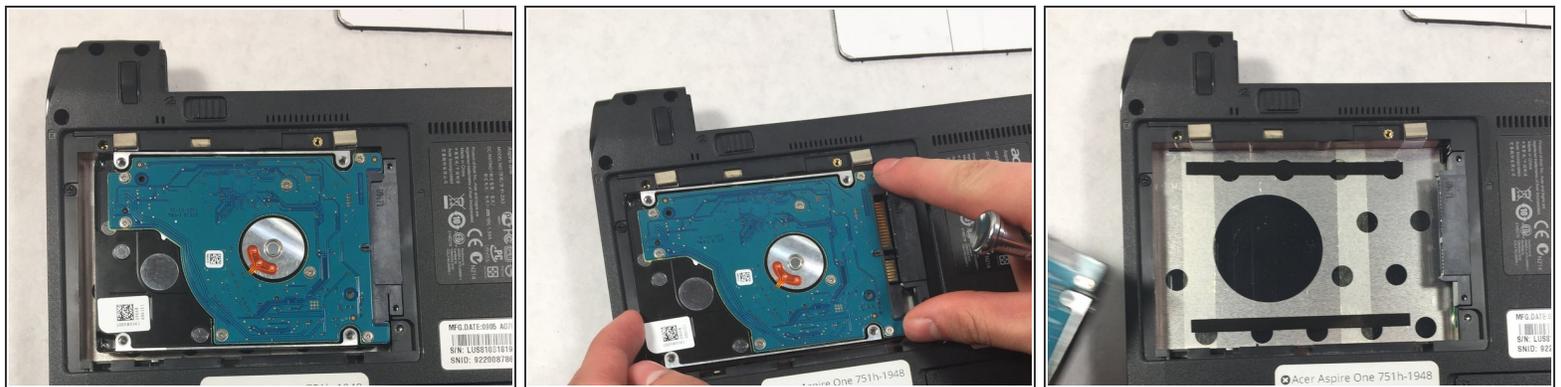

- Remove the hard drive by sliding it to the left and pull it out.

Step 5

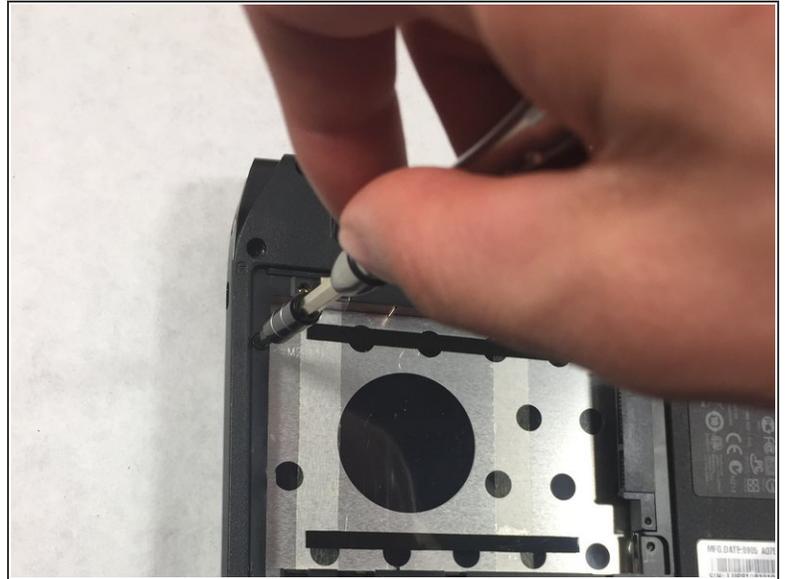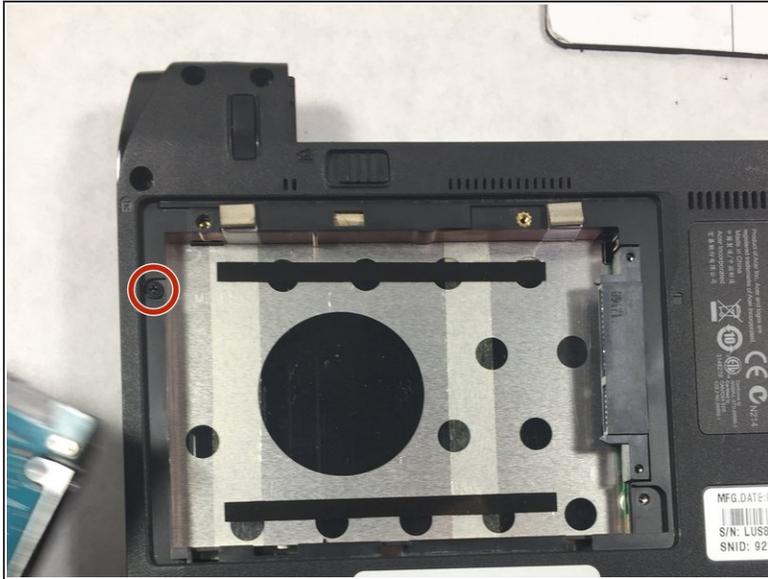

- Unscrew the Phillips #0 (M2-L2.5 mm) screws.

To reassemble your device, follow these instructions in reverse order.