



Sticky Key Saxophone Fix

This guide will show how to loosen a sticking key on a saxophone.

Written By: AlysonStrange



INTRODUCTION

Hello this guide is to be used for sticking keys on a saxophone; however, this guide should be used as a last resort if cleaning the pad on the key did not solve the problem. Most sticking keys can be solved easily by simply cleaning the pad, but in extreme cases it may be deemed necessary to loosen the key itself.

TOOLS:


- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — Sticky Key Saxophone Fix



- Locate sticking key.

Step 2

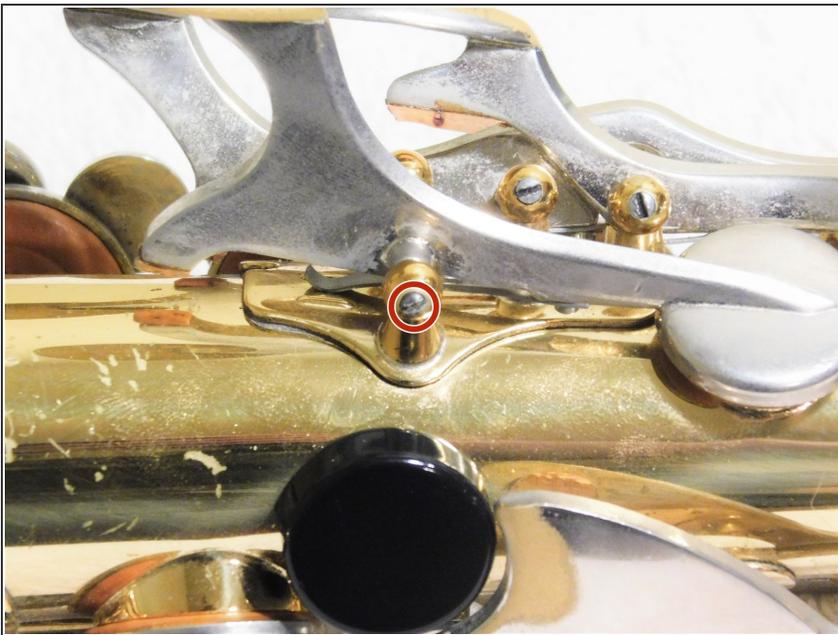

- Screws are located down from key.

Step 3



- Loosen screw slowly and carefully, so that screw isn't lost.

Step 4



- Test key and note free movement.

Step 5



- Put saxophone completely together and test out key.
- ⓘ If key still sticks repeat previous steps.

Loosen screw until key moves freely or as desired. Once as desired, you are then ready to play the instrument and test out key!