



Eureka SuctionSeal 2.0 Pet Brush Roll Cover Replacement

How to remove the Eureka SuctionSeal 2.0 Pet brush roll cover.

Written By: Grayson Clendenon



INTRODUCTION

This guide walks you through removing the brush roll cover. This is a necessary step to access the brush roll and the motor.



TOOLS:

- [JIS #1](#) (1)
-

Step 1 — Dust Cup



- Place the device upright with the brush roller closest to you.
- Pull up on the latch at the top of the dust cup.
- Tilt the top of the dust cup forward and pull towards yourself, removing the container from the device.

Step 2 — Brush Roll Cover



- Locate the gray exhaust filter cover at the top of the vacuum's base.
- Grip the two tabs in the middle of the filter cover and rotate counter-clockwise.
- Lift the cover away from the vacuum.

Step 3



- Pull up and unhook the two front tower latches using two fingers. These are located at the base of the tower.
 - Pull up and unhook the latch on the back of the tower.
 - Firmly lift the vacuum tower up and out of its stand.
- i** The exhaust filter cover can be replaced once the tower is removed. It will not affect the steps.

Step 4




- Remove the four 20mm screws on the top of the vacuum head's cover using a JIS 1 screwdriver.

Step 5



- Turn the vacuum head so that the back is facing you.
 - Press the handle release pedal.
 - Rotate the top of the motor cover down while pressing on the pedal release.
- i** The motor cover should rotate from an upright position back towards the ground, as it would if the handle were still attached.

Step 6

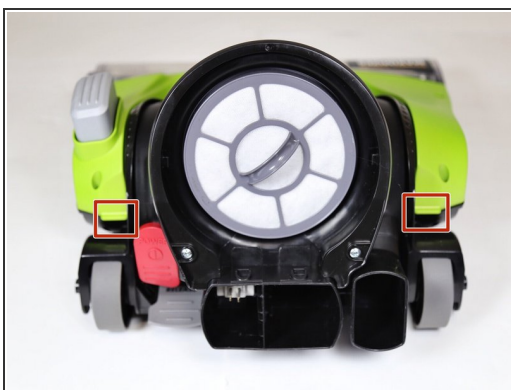

- Locate the two tabs on the back of the cover.
- Pull up on the tabs and lift the cover away from the device.

To reassemble your device, follow these instructions in reverse order.