




# Acer Iconia One 10 B3-A30 Repair Battery Replacement

This guide shows you how to replace the Acer Iconia One 10 B3-A30 battery. This is for the instance in which it no longer has a functioning battery.

Written By: Austin Pickart

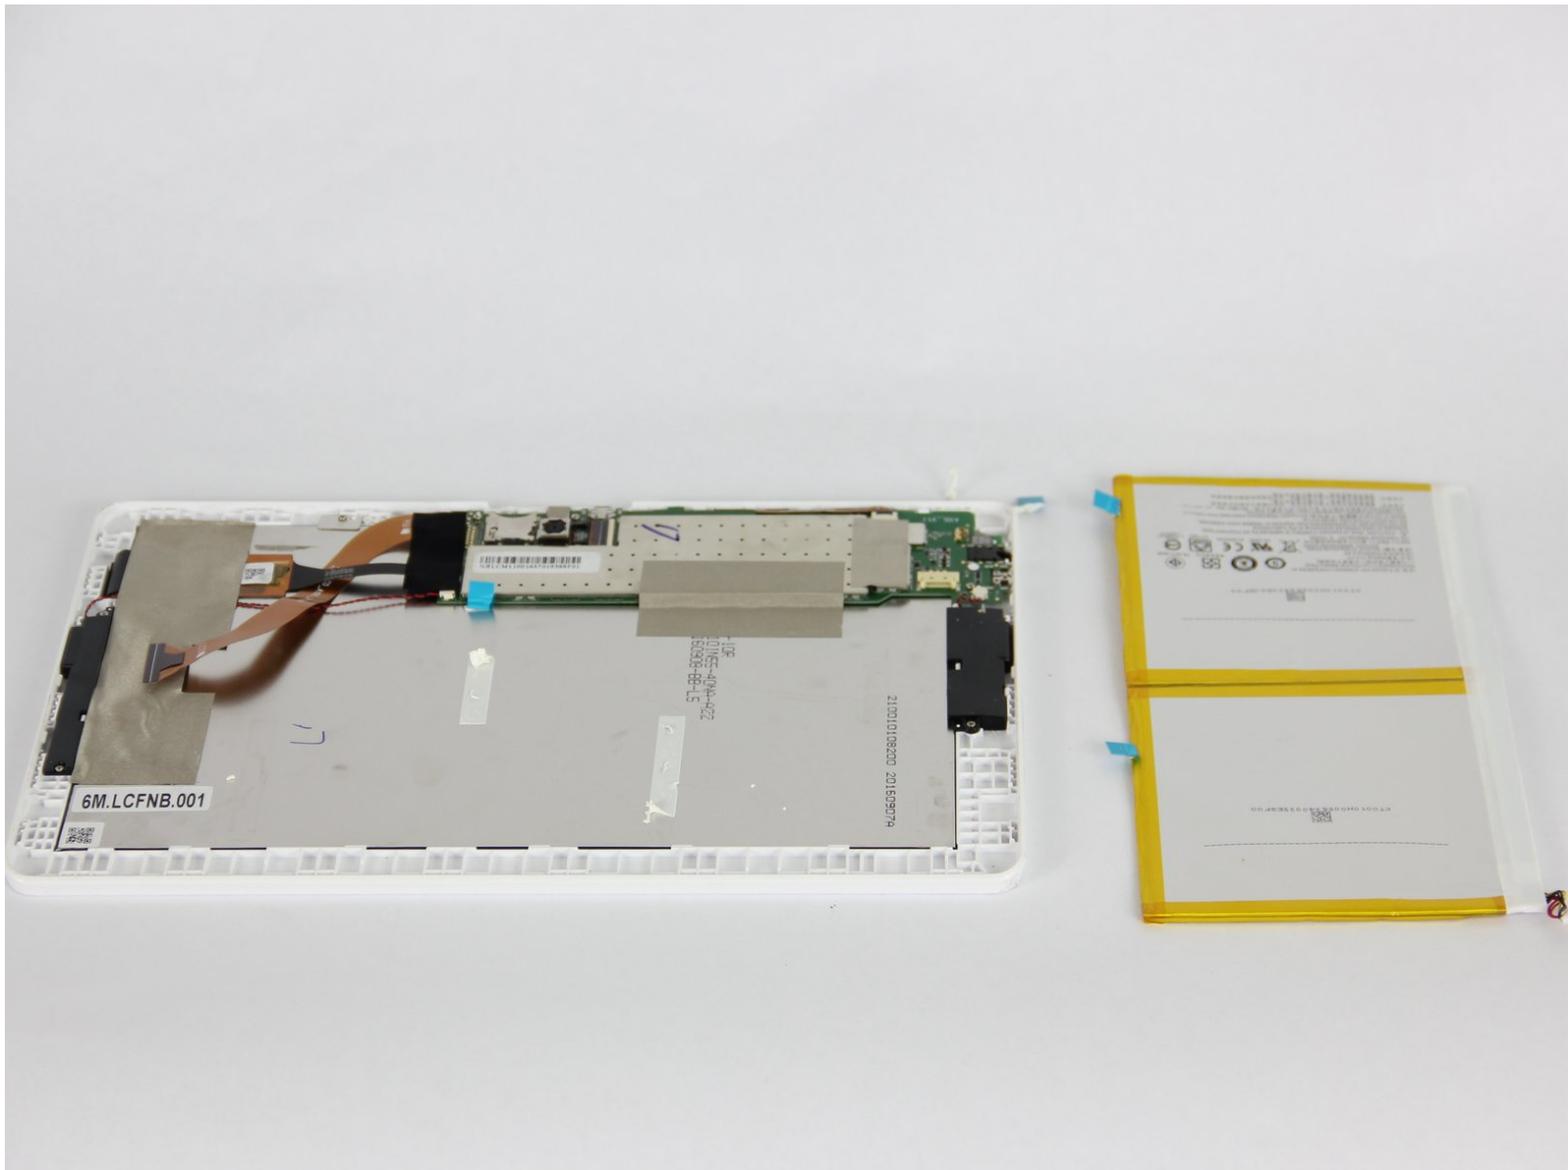

---

## INTRODUCTION


If your device is not powering on or it frequently overheats, your battery probably needs replacement. For this, you will need a Phillips #00 screwdriver and a thin metal spudger to easily remove the battery.

---

### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

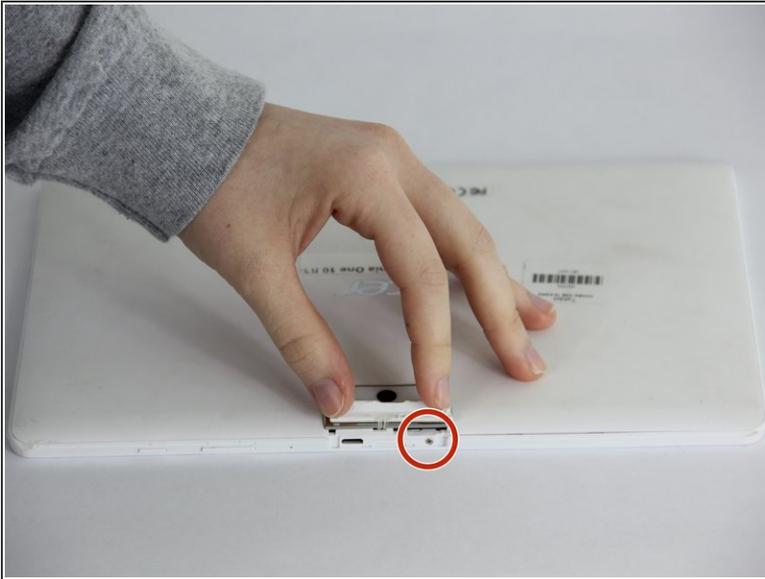

 Make sure the device is powered off.


- Open media port cover at the top of the tablet.
- Use the Phillips #00 screwdriver to remove the 1 mm screw.

## Step 2




- Using the metal spudger, carefully pry open the back cover.

### Step 3

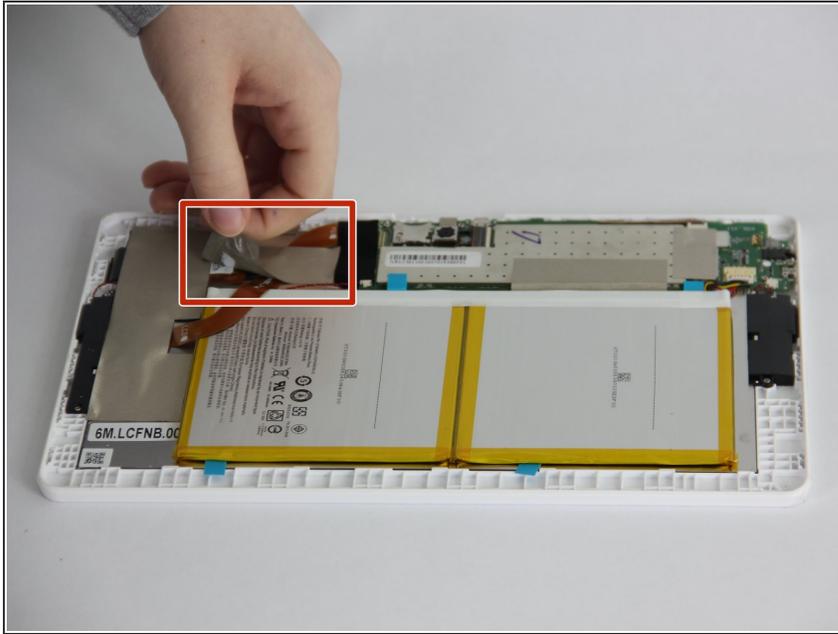


- Remove small section of grey tape.

### Step 4

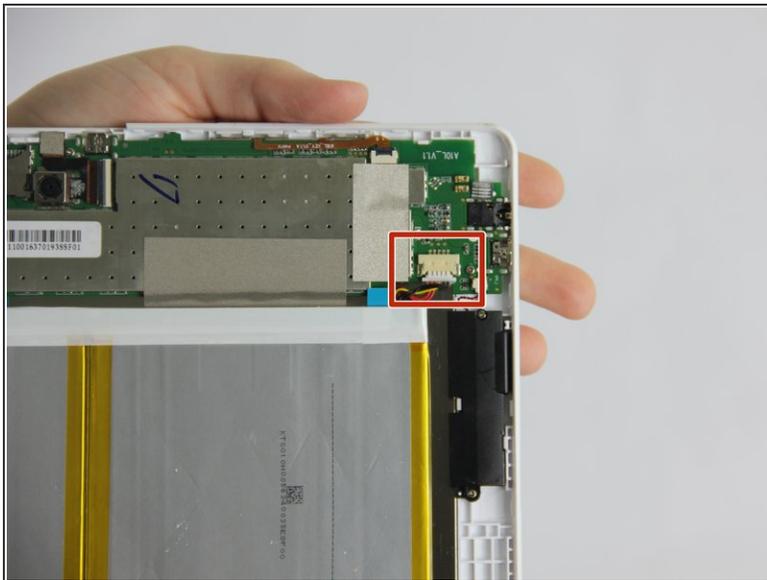

- Unplug the connection cord from the motherboard.

## Step 5

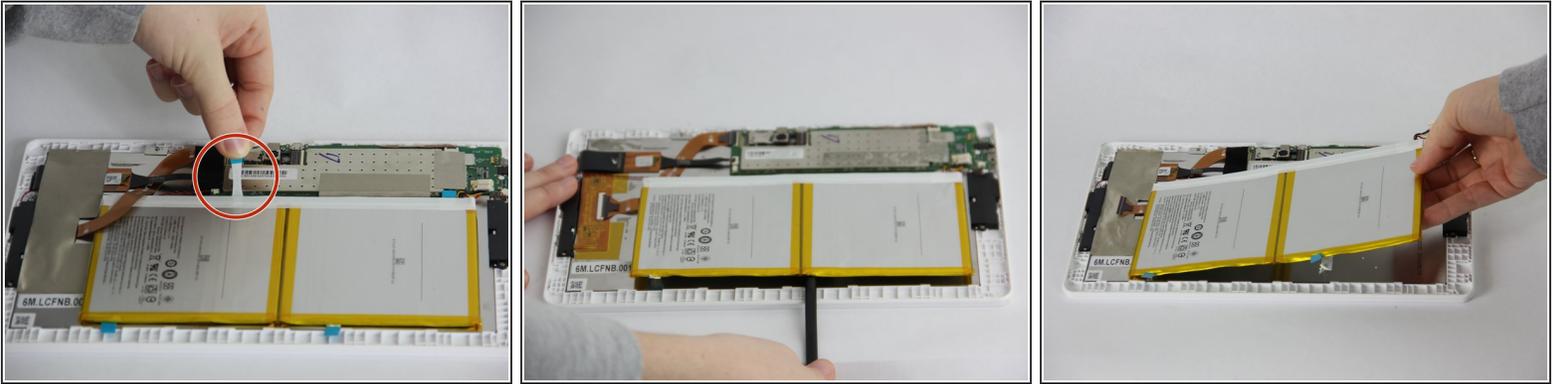

- Try to remove the battery by pulling on the blue tabs.
  - If unsuccessful, use the black plastic spudger to gently break the glue bonds underneath and pull up to remove the battery.
- ⚠ Be very cautious not to puncture or bend the battery.

To reassemble your device, follow these instructions in reverse order.