



Nintendo Wii 2011 Disassembly

A guide to removing the outer case and internal components of a Nintendo Wii.

Written By: Noah Mussin Phillips



INTRODUCTION

This guide will walk you through safely removing the outer case and main internal components of a Nintendo Wii, either for exploration or replacement.

NOTE: You MAY need a screwdriver extender, especially if you are using a screwdriver with interchangeable heads. We used our extender during step 4.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Y1 Tri-point Screwdriver](#) (1)
 - [Tweezers](#) (1)
- Angle-head Needle Nose
- [Metal Spudger](#) (1)
 - [1/4" hex bit](#) (1)
-

Step 1 — Nintendo Wii 2011 Disassembly




- Using the Phillips #0 screwdriver, remove the single screw from the bottom of the device.
- Pull out the slot with the battery (pictured in the third photo). Leave both the battery and the slot organized on the side with the removed screw.

Step 2




- Use tweezers to remove the three black square stickers on the top of the console by prying under and gently pulling up to expose three screws.

Step 3

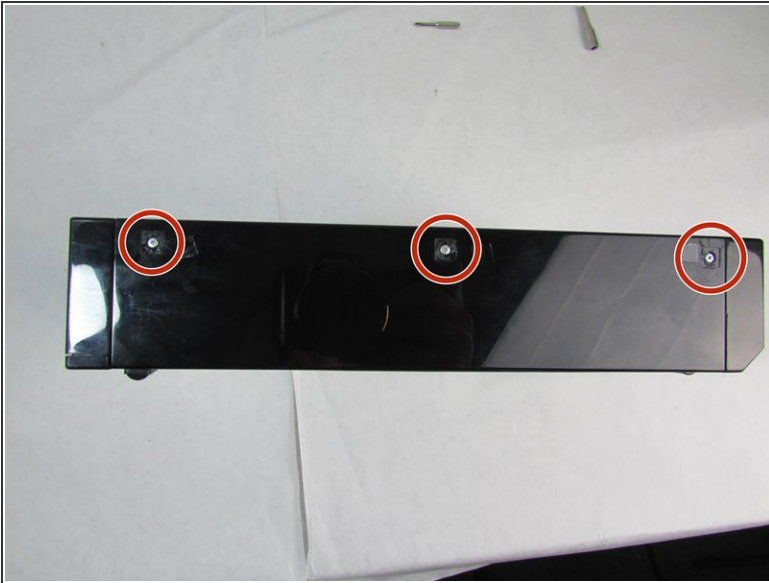

- Use the Phillips #0 screwdriver to unscrew all three of the 4.1mm screws underneath the rubber feet.
- Leave the screws in their holes and remove this plate.

Step 4

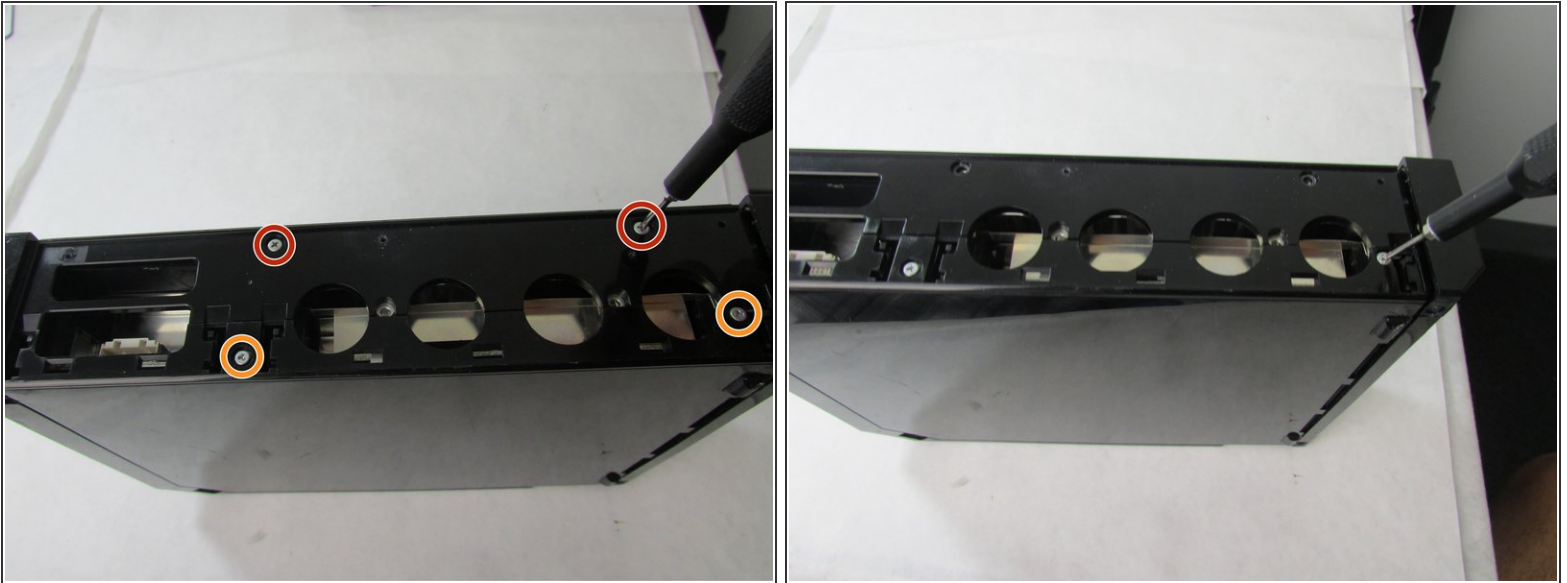

- Remove the two 5.9 mm screws using the Phillips #0 screwdriver.
- Remove the two 8.3mm screws using the Y1 Tri-point screwdriver.

Step 5




- Remove the two half-cylinder stickers from the back left side of the Wii using the spudger.
- Remove the two rectangular size stickers closest to the front of the Wii using the tweezers. Ignore the other two half-cylinder stickers.

Step 6




- Use the Y1 Tri-point screwdriver to remove all four Y screws on the left facing side of the console.
- ⓘ The two 8.3 mm Y screws closest to the rear ports will require the extension for the screwdriver to make contact with the screws.

Step 7

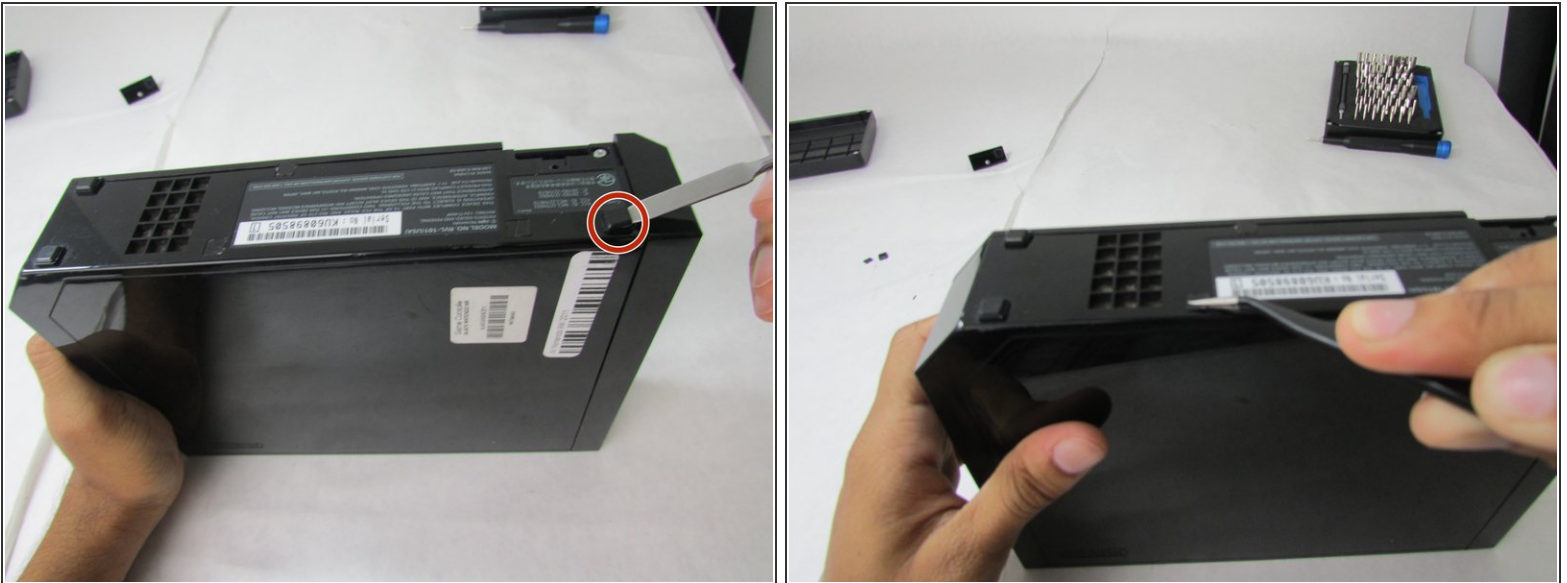


- On the bottom of the console, use the spudger tool to remove the one square rubber pad.
- Then use tweezers to take off three flat square stickers covering screws.

Step 8

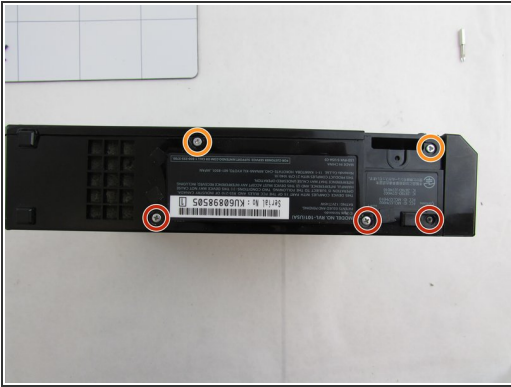



- Use the Phillips #0 screwdriver to remove three screws.
- Use the Y1 Tri-point screwdriver to remove two screws.

Step 9

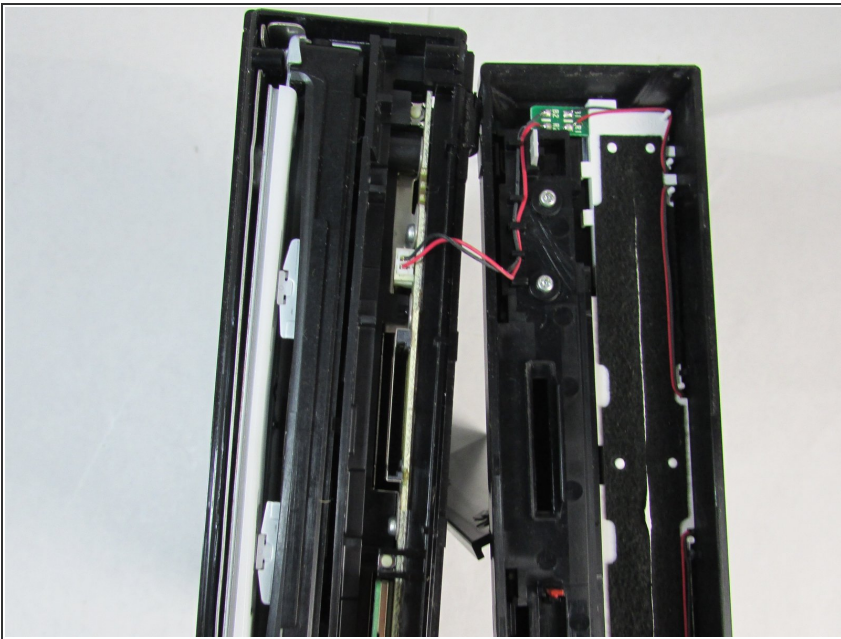

- Carefully pull off the front cover (the one with the disc drive hole). You will expose a red and black wire.

Step 10

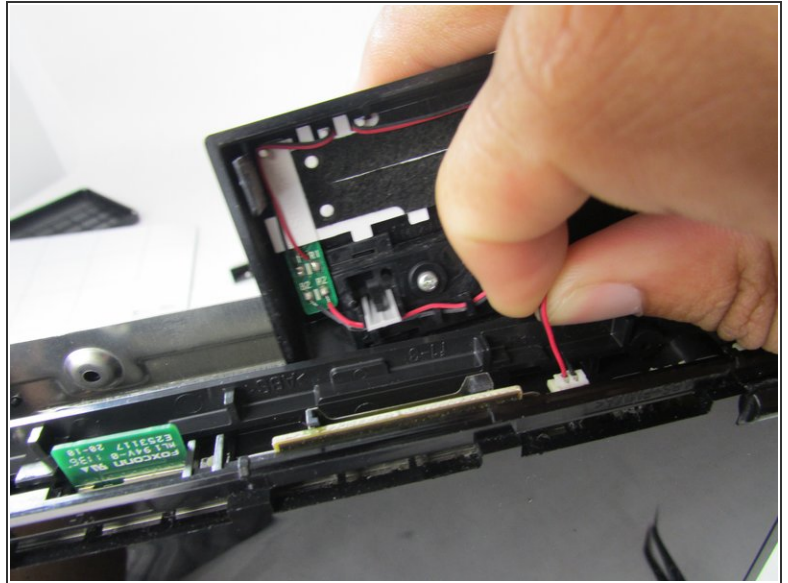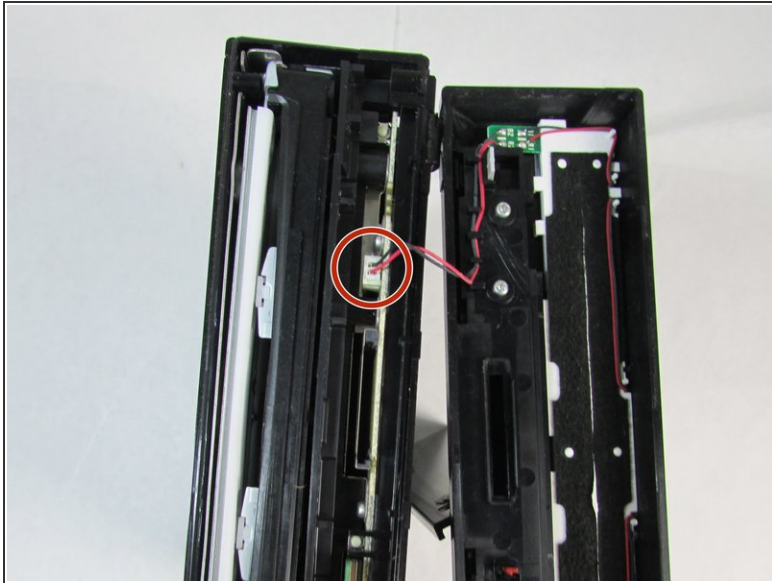




- Pinch the red and black wire at the same time and pull perpendicular to the port. The wire will come out of the port.
- ⓘ Make sure to pinch both wires when you pull to prevent damage to the wires.

Step 11




- After removing the front cover, evenly pull from each corner to pull apart the left side and right side of the case.
- ⓘ This step is easiest if you take time to not fully remove the right side cover immediately but instead pull each corner a little amount and repeat as many times as necessary to prevent bending or damage to the interior metal frame.

Step 12

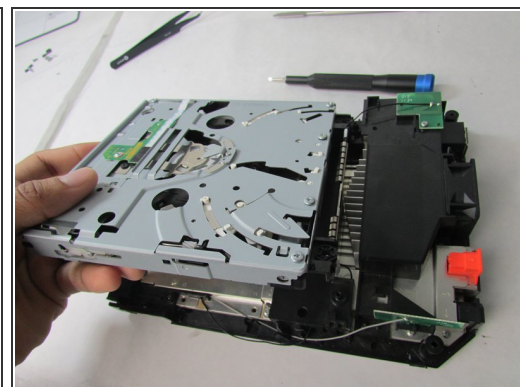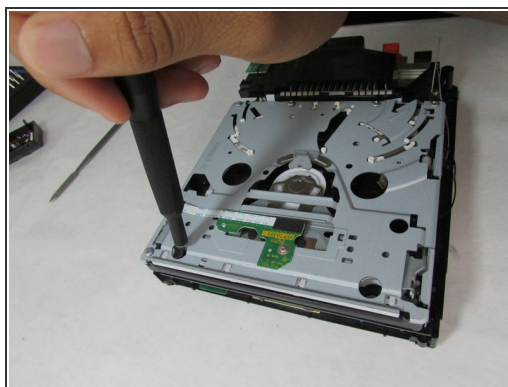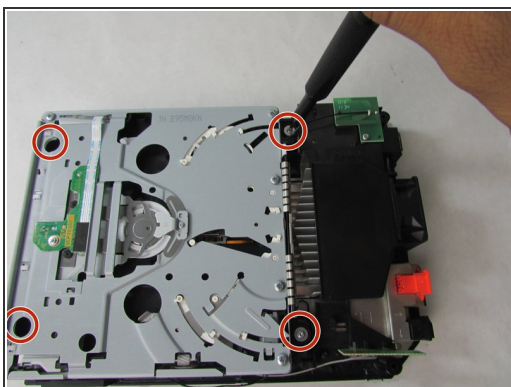


- Remove the four 9 mm screws using the Phillips #0 screwdriver.
- ⓘ They are distinct from all other screws because the head of the screw had a built in washer.

Step 13

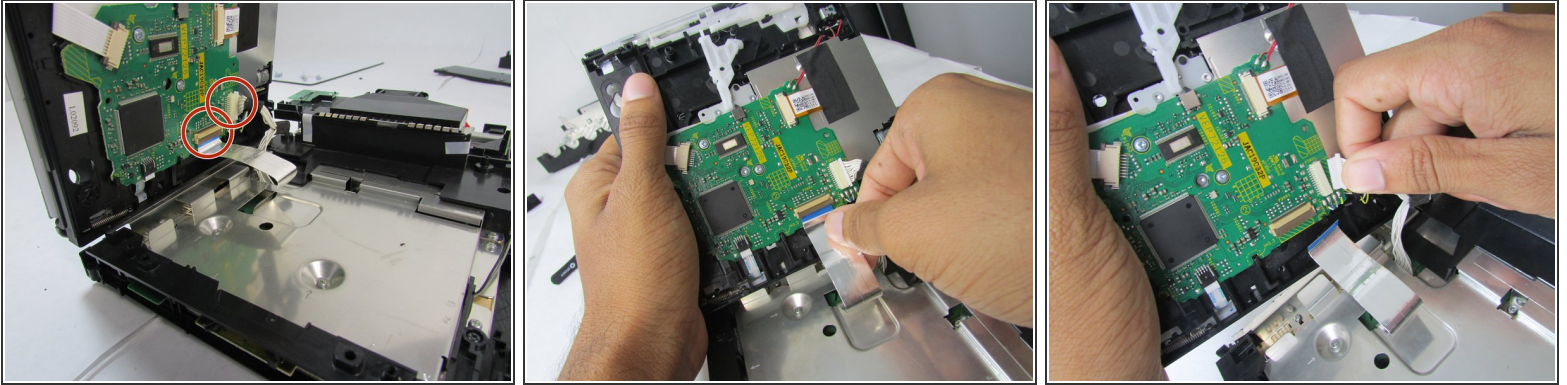


- For the wide, flat wire on the left of the other wire, flip up the wire holding lock and then carefully pull away parallel to the disc drive.
- For the multiple wires on the right side of the wide wire, just pull away parallel to the disc drive to remove.

Step 14

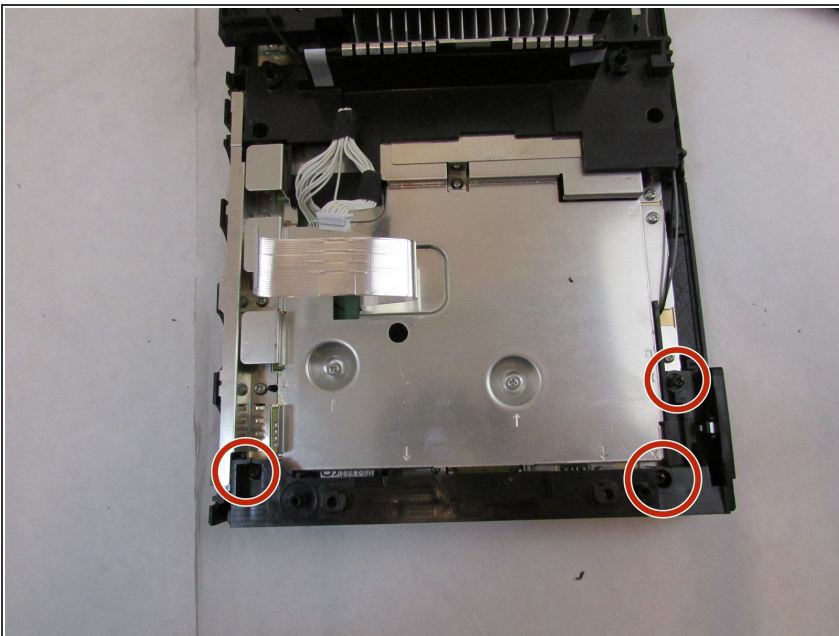


- Remove the three 10mm screws using the Phillips #0 screwdriver.
- Lift the plastic piece and remove it from the device.

Step 15

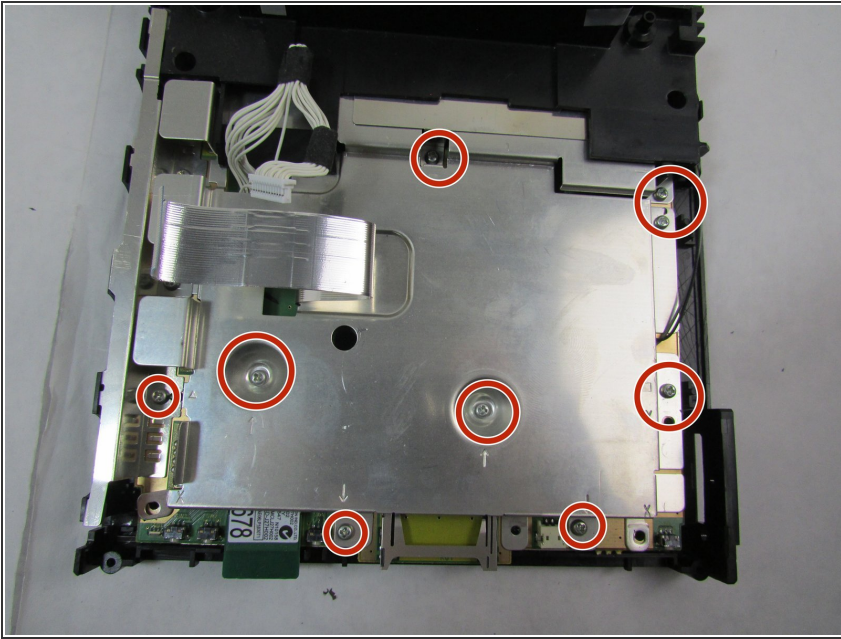



- Remove the eight 7mm screws using the Phillips #0 screwdriver.

Step 16

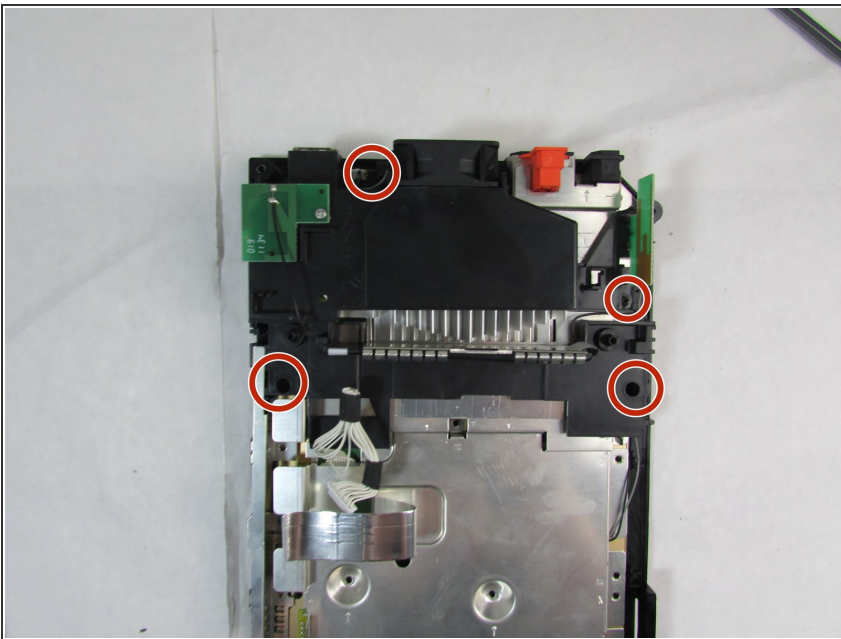



- Remove the four black 10 mm screws attached to the black plastic frames using the Phillips #0 screwdriver.

Step 17

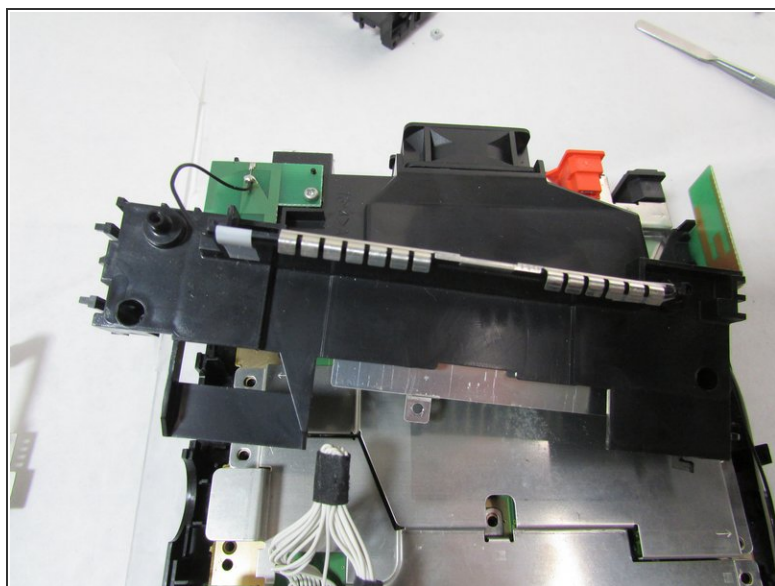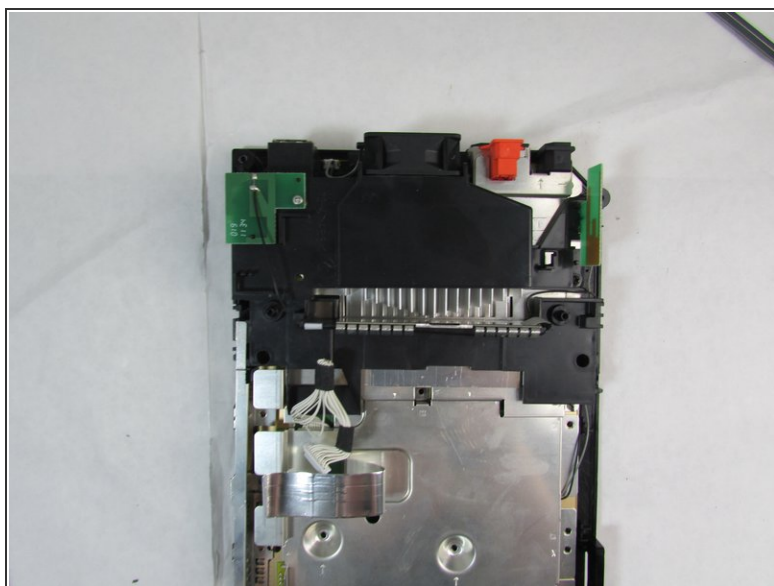


- Very carefully remove the black plastic covers.
- ⓘ Be careful during this step because wires are still attached to other components underneath.

Step 18

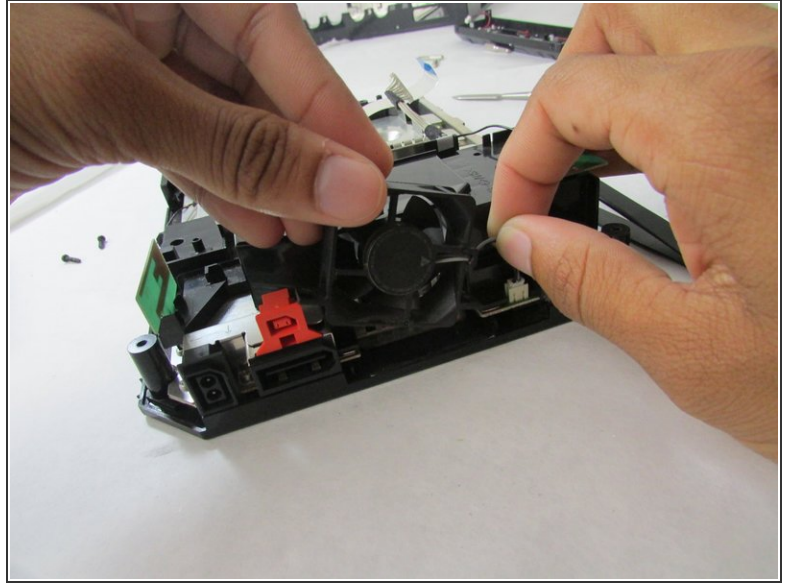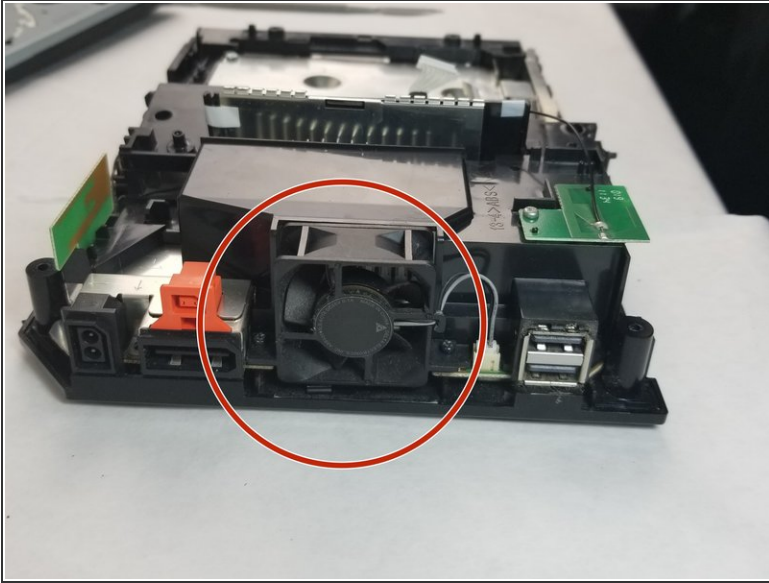

- After removing all silver and 10 mm black screws attached to the console frame, remove the fan by pinching the grey and black wires at the same time. Detach the wires from the port.
- ⓘ If they are not removed at the same time, the risk of wire tear or breaking the proper connection to the port increases.

Step 19

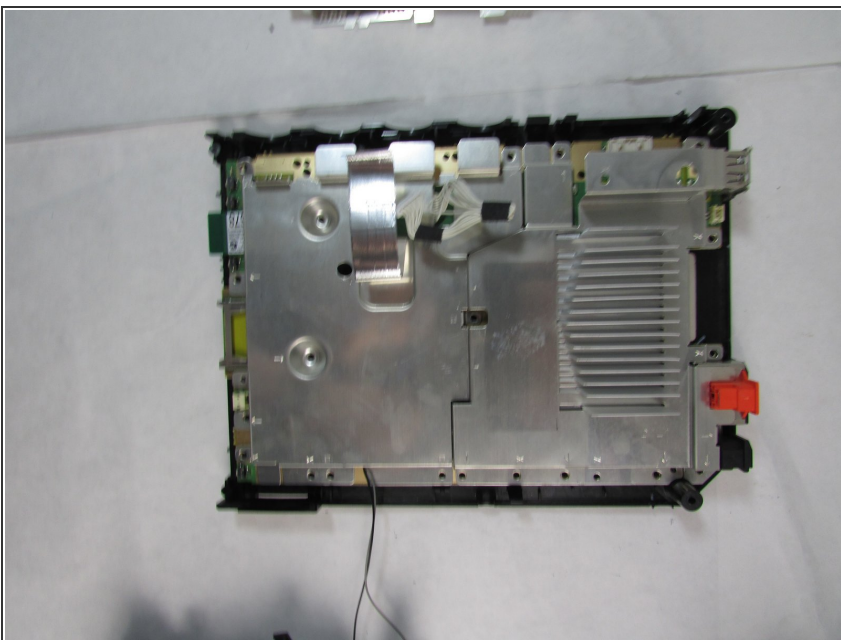



- Remove the metal plate covering the motherboard carefully.
- ⓘ The wires should be threaded carefully through the hole in the metal casing, as they are still attached to components underneath.

Step 20



- Using a Phillips #0 screwdriver, remove the four 11.3 mm Phillips screws attaching the heatsink to the case frame and motherboard.
- Pull off the heatsink and place carefully on a dry surface.

Step 21

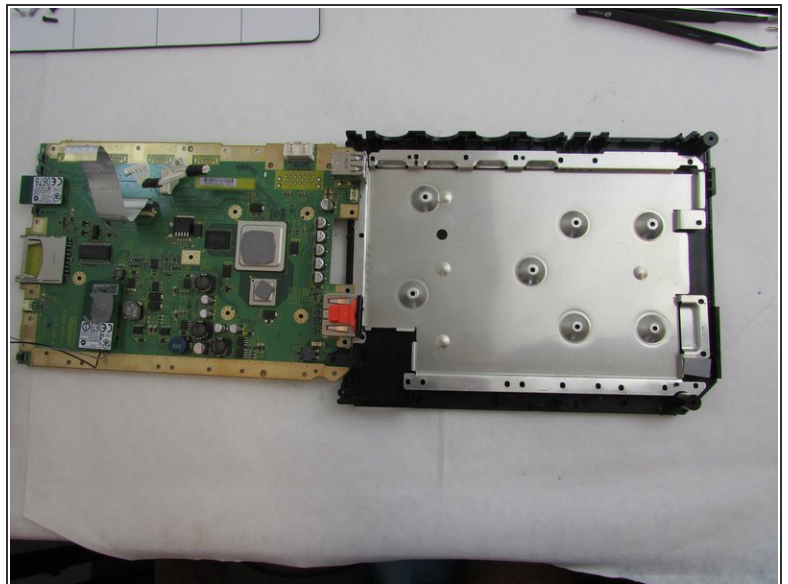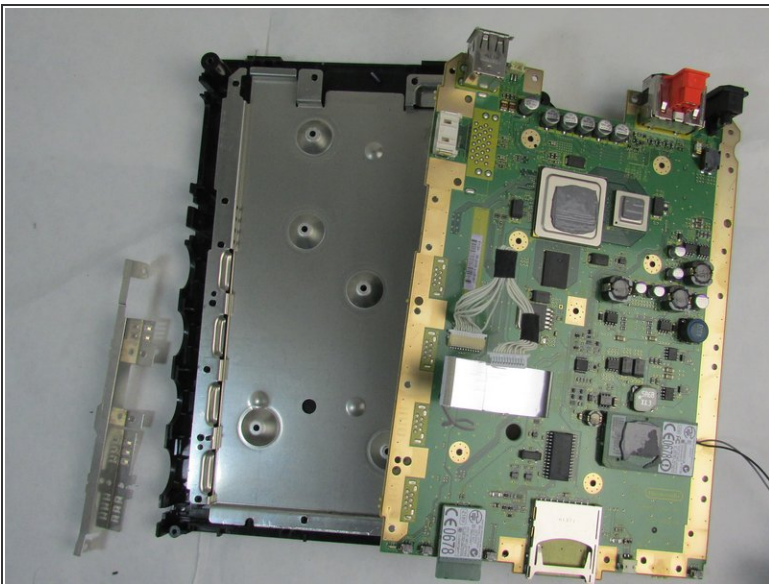

- Once the heatsink is removed, cautiously pull the motherboard out from the left side of the console case and remove it from the device.

To replace the cover, either with the original or a new one, follow these instructions in reverse order. The time estimate only includes the time that is required to remove the outer case.