




Wahl Lithium Ion Trimmer Motherboard Replacement

In this guide you will learn how to replace the...

Written By: nathan

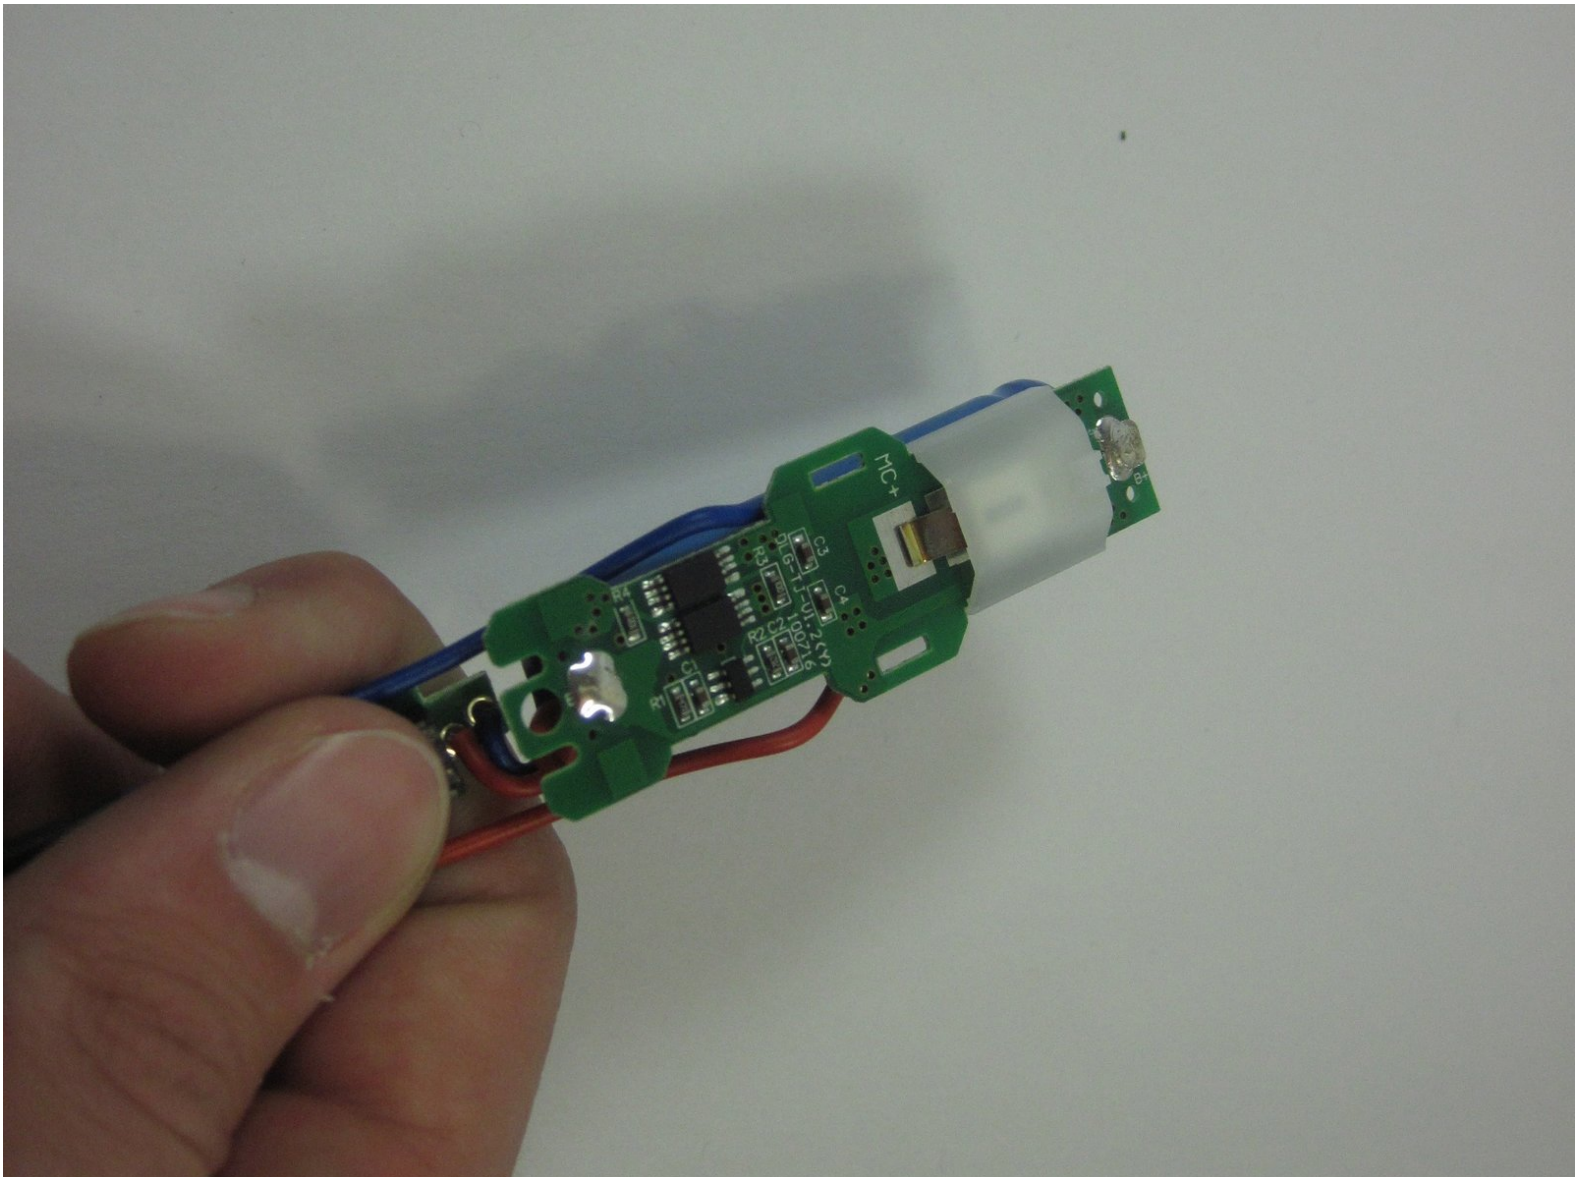

INTRODUCTION

In this guide you will learn how to replace the chip set in a Wahl Lithium Ion Trimmer.



TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [Soldering Iron](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Disassembling of Wahl Lithium Ion Trimmer




- Begin by removing the rubber grip along the handle.

Step 2




- Remove the screws from the top to take the metal piece and plastic part off.

Step 3

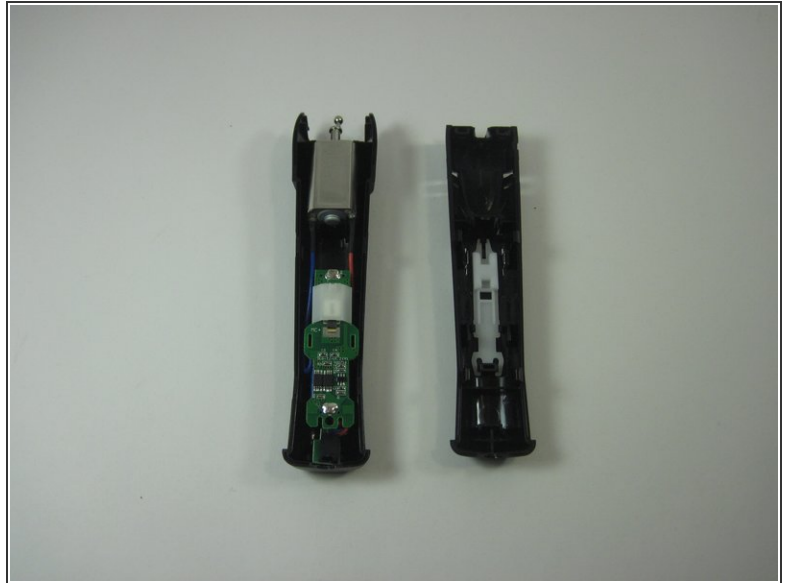


- Pry open the plastic cover into two separate pieces. The plastic is very durable so don't worry about breaking it upon prying it open.

Step 4 — Motherboard

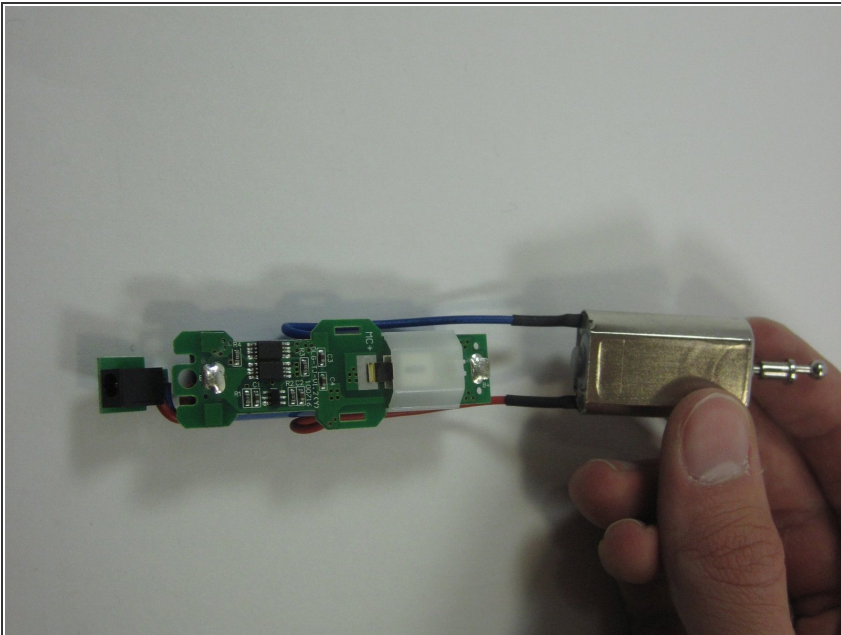


- Remove the motor, battery, and motherboard from the plastic casing.

Step 5

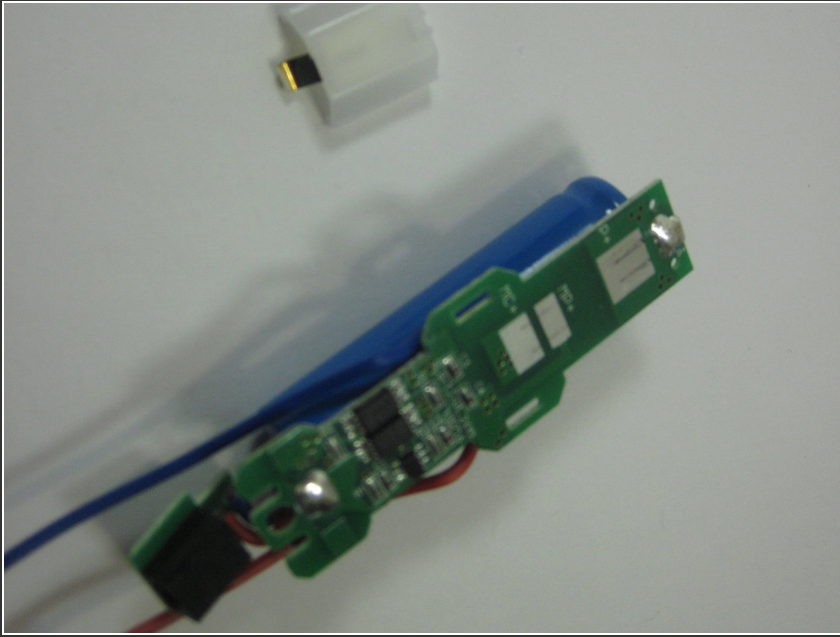

- Remove the white plastic piece and the wires from the motherboard.
- ⓘ If necessary, cut the wires as close to the motherboard as possible so that you can reconnect them to the new motherboard.

Step 6

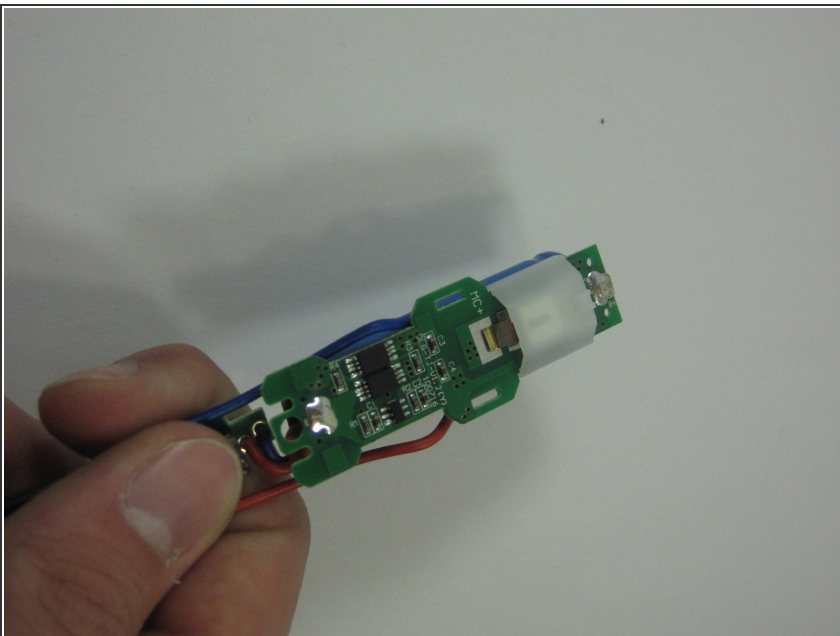

- Remove the old motherboard and install the new one. Then, connect the wires and white piece to the new motherboard.

To reassemble your device, follow these instructions in reverse order.